


REMOVE & REPLACE POWER SUPPLY & MOTORS

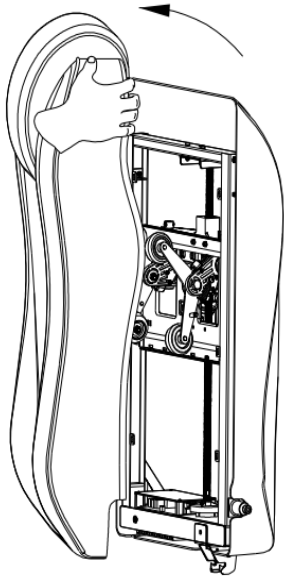

1. Remove back cushion to access to the brackets screws
2. To remove Power supply : Remove 2 screws Bracket holder
3. To remove Up/Down motor:
 - 3.1 Remove locking bracket 2 screws
 - 3.2 Remove Up/Down Belt
 - 3.3 Remove 4 Motor mounting screws
4. If the Kneading or Tapping Motors do not function, swap the twisted connectors to find the defected motor. Simply remove the belts and mounting screws to replace Motors as needed.

